Remington

DUPONT
REG. U.S. PAT. OFF.

HIGH POWER RIFLE
BOLT ACTION REPEATER
FIXED BOX MAGAZINE . . . ADL and BDL GRADES

MODEL 700

INSTRUCTION FOLDER and PARTS PRICE LIST

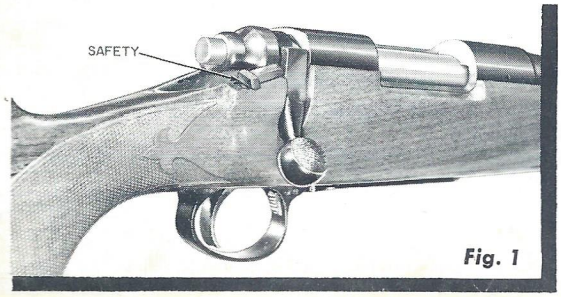

Fig. 1

TO PUT BOLT IN RIFLE — Simply align bolt lugs to receiver properly, then push cocked bolt forward into rifle.

ON SAFE (Fig. 1) — Rotate side lever safety at right rear of receiver to rear stop position. Bolt handle will be locked down and trigger **will not** fire rifle.

FIRE—Rotate safety forward to front stop position. Trigger can be pulled to fire rifle or bolt handle raised to open action.

Caution: Before firing make sure barrel is clean, free of heavy oil, grease, or any obstruction.

TO SINGLE LOAD — Raise bolt handle to unlock bolt. Pull bolt handle back to open action. Load single cartridge upon magazine follower or directly into chamber. Close bolt and lower bolt handle to lock action closed.

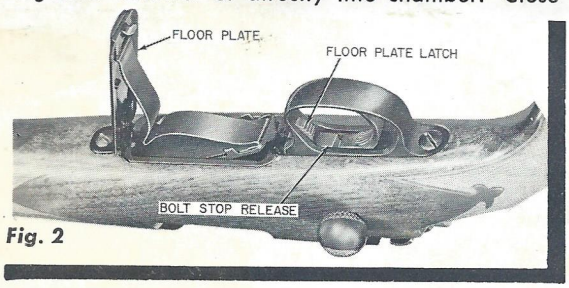

Fig. 2

TO MAGAZINE LOAD — Open bolt and load cartridges directly into magazine for ADL Grade model.

For BDL Grade, cartridges load in same way or close bolt and load from bottom of magazine. Push safety ON SAFE and turn rifle bottom upwards. Press floor plate latch to release floor plate (Fig. 2). Lift floor plate with attached follower and spring and load cartridges into magazine opening. Close floor plate and snap floor plate into position.

TO UNLOAD — Pull bolt rearward carefully and take cartridge from rifle. Then push bolt forward until next cartridge is released from magazine. Continue until magazine is empty. BDL Grade magazine may be unloaded from bottom with bolt closed and safety ON SAFE. Be certain also to empty chamber.

BARREL CARE—Use lightly oiled patch, cleaning from breech to muzzle. Remove bolt to make cleaning easier. Press upwards on bolt stop release (Fig. 2) and pull bolt from receiver. Scrub bore with cleaning solvent if necessary.

ACTION CARE AND DISASSEMBLY—Remove bolt and stock if necessary to clean action or replace parts. Unscrew, remove guard screws, and lift stock away from action and barrel. Clean bolt and action in solvent and wipe clean.

Before re-assembling stock to receiver, particularly on ADL Grade, **locate magazine fully into magazine recess** in bottom of receiver. This special care will prevent any damage to stock when stock is tightened against receiver.

Note: Re-assemble BDL Grade trigger guard assembly (includes floor plate, guard, magazine follower and spring) to stock before placing stock over assembled magazine.

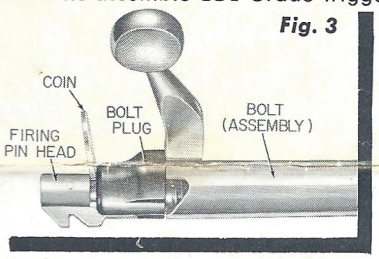

Fig. 3

TO DISASSEMBLE BOLT PARTS — Pull bolt from rifle. Pull firing pin head back until coin or similar piece can be inserted (Fig. 3). Hold bolt handle and turn bolt plug until entire firing pin assembly can be pulled from bolt assembly. Re-assemble in reverse order.

TO ADJUST TRIGGER — Remove trigger guard and stock. Cock bolt in receiver.

IMPORTANT: No adjustment or removal of the trigger engagement screw is recommended unless replacement is necessary. The trigger engagement screw is set at the factory to engage the trigger and provide the correct amount of supporting trigger connector surface beneath the sear (Fig. 4).

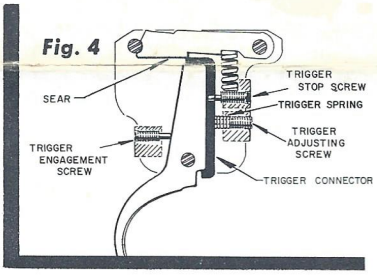

Fig. 4

PULL OF TRIGGER: Is adjusted to the desired weight by turning the trigger adjusting screw clockwise for a heavier weight adjustment and counter clockwise for a lighter weight adjustment.

TRAVEL OF TRIGGER: May be reduced by turning the trigger stop screw clockwise until the firing pin will not fall when the trigger is pulled. Then while keeping pressure on the trigger, back off the trigger stop screw, counter clockwise, until the firing pin falls. Continue back off about 1/16 turn. This method of adjusting will allow the least amount of trigger overtravel.

Your REMINGTON MODEL 700 will remain clean longer if little or no oil is used on action parts. Lubricate cam surfaces on bolt to prevent wear. Wash action and bolt parts with a good grade of petroleum solvent, dry, and re-oil **very** lightly.

HANDLING — Wipe barrel, receiver, and all steel parts to prevent rusting. Invisible "prints" of moisture can cause rust unless removed.

EXPOSURE — After using in wet weather always wipe steel parts with oil to prevent rusting. Abrupt changes in temperature can cause condensation and wetness. Therefore, special care is needed to interior steel parts to prevent rust. When shooting in freezing weather, remove excess oil for best results. Use dry graphite if necessary to lubricate metal parts.

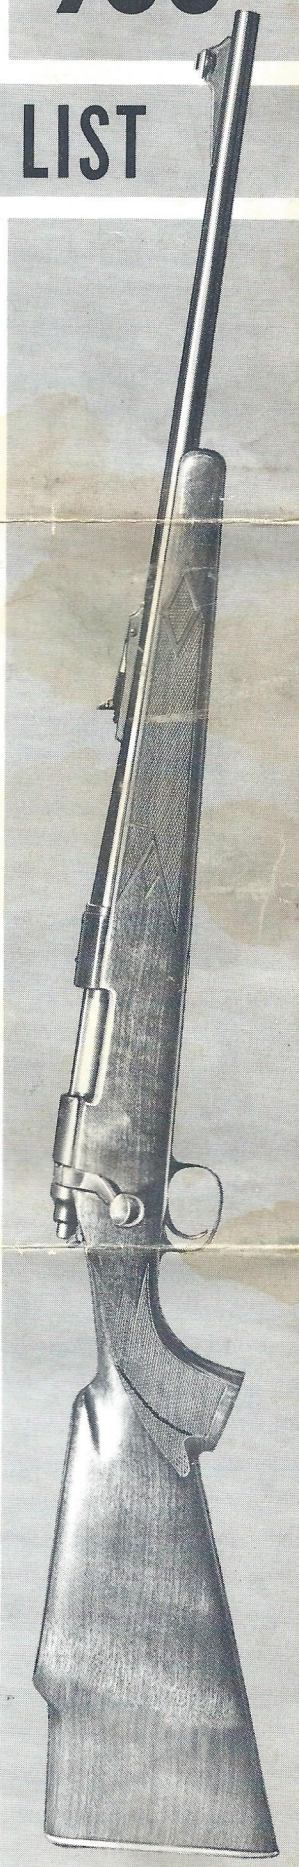

REMINGTON ARMS COMPANY, INC. • Ilion, N.Y., U.S.A.

CF–17

COMPONENT PARTS

Remington

MODEL 700

BOLT ACTION — HIGH POWER Rifle

ALWAYS ORDER COMPONENTS BY PART NUMBER AND PART NAME

Notice: Prices for barrels and bolts will be quoted upon application. Factory assembly required.

Part No.	NAME OF PART	List Price
	NOTE: Basic 30-06 Caliber listed below. See Sectional View for proper identity of parts. See added page for other caliber part listings.	
26271	Barrel Assembly (includes Barrel, Barrel Bracket, Receiver)	Price on Application
26327	Bolt Assembly (includes Bolt Body Assembly and Bolt Handle)	Price on Application
26317	Bolt Final Assembly (includes Bolt Assembly, Ejector, Ejector Pin, Ejector Spring, Extractor, Extractor Rivet, Firing Pin Assembly) (not shown)	Price on Application
17012	Bolt Plug	$ 1.80
17013	Bolt Stop	.60
24475	Bolt Stop Pin	.25
15478	Bolt Stop Release	.25
15224	Bolt Stop Spring	.35
16601	Butt Plate	1.10
25410	Butt Plate Screw	.25
15287	Center Guard Screw, ADL Grade	.25
17017	Ejector	.90
17676	Ejector Pin	.25
17019	Ejector Spring	.25
16254	Extractor	1.35
27340	Extractor Rivet	.25
22020	Firing Pin	2.70
22040	Firing Pin Assembly (includes Bolt Plug, Firing Pin, Firing Pin Cross Pin, Firing Pin Head, Main Spring)	7.50
17022	Firing Pin Cross Pin	.25
19800	Floor Plate, BDL Grade	2.10
15291	Floor Plate Latch, BDL Grade	.60
16451	Floor Plate Latch Pin, BDL Grade	.25
16452	Floor Plate Latch Spring, BDL Grade	.35
16453	Floor Plate Pivot Pin, BDL Grade	.35
22035	Front Guard Screw	.25
15161	Front Guard Screw Bushing, ADL Grade	.35
15373	Front Sight	.90
15719	Front Sight (Low)	.90
15363	Front Sight Hood, BDL Grade	.60
15357	Front Swivel Nut, BDL Grade	.25
15356	Front Swivel Screw, BDL Grade	.60
15331	Grip Cap, BDL Grade (not shown)	.35
15332	Grip Cap Spacer, BDL Grade (not shown)	.35
15284	Magazine, ADL Grade	.80
16430	Magazine, BDL Grade (not shown)	.80
17024	Magazine Follower	.60
15752	Magazine Follower, BDL Grade	.60
17028	Magazine Spring	.80
17029	Main Spring	.50
26355	Rear Guard Screw	.25
24525	Rear Sight Assembly (includes Rear Sight Collar, Rear Sight Eyepiece, Rear Sight Leaf, Rear Sight Windage Screw)	3.30
16454	Rear Sight Base	$ .90
16023	Rear Sight Base Screw	.25
16456	Rear Sight Screw	.25
28095	Rear Sight Step (Selected Sizes)	.25
16968	Rear Sight Washer	.25
15358	Rear Swivel Screw, BDL Grade	.60
17034	Receiver Plug Screw	.25
26585	Safety Assembly (includes Safety, Safety Button)	1.20
23222	Safety Detent Ball	.25
15368	Safety Detent Spring	.25
17043	Safety Pivot Pin	.25
17044	Safety Snap Washer	.25
26590	Sear and Safety Cam Assembly (includes Safety Cam, Sear)	2.10
24476	Sear Pin	.25
17047	Sear Spring	.25
26625	Sling Strap Assembly, BDL Grade (includes Sling Strap, Fastener, Keeper, Front; Keeper, Rear)	3.45
26990	Sling Strap Assembly and Mountings Complete (includes Sling Strap Assembly, Swivel Assembly, Q. D. (2), Front Swivel Nut, Front Swivel Screws, Rear Swivel Screw)	9.10
26381	Stock Assembly, ADL Grade (includes Butt Plate, Butt Plate Screw (2), Front Guard Screw Bushing, Stock, Stock Reinforcing Screw, Stock Reinforcing Screw Dowel)	38.50
26401	Stock Assembly, BDL Grade (includes Butt Plate, Butt Plate Screw (2), Fore-end, Fore-end Spacer, Grip Cap, Grip Cap Spacer, Front Swivel Nut, Stock, Stock Reinforcing Screw, Stock Reinforcing Screw Dowel) (not shown)	44.20
18186	Stock Reinforcing Screw (not shown)	.35
16970	Stock Reinforcing Screw Dowel (not shown)	.25
26555	Swivel Assembly, BDL Grade (Q. D.)	2.10
15280	Trigger	.90
17053	Trigger Adjusting Screw	.25
26345	Trigger Assembly (includes Bolt Stop Release, Trigger Housing Assembly, Safety Assembly, Safety Detent Ball, Safety Detent Spring, Safety Pivot Pin, Safety Snap Washer, Sear and Safety Cam Assembly, Sear Spring, Trigger, Trigger Adjusting Screw, Trigger Connector, Trigger Engagement Screw, Trigger Pin, Trigger Spring, Trigger Stop Screw) (not shown)	10.50
19461	Trigger Connector	.50
17053	Trigger Engagement Screw	.25
15281	Trigger Guard	2.70
26376	Trigger Guard, BDL Grade	6.00
26371	Trigger Guard Assembly, BDL Grade (includes Floor Plate, Floor Plate Latch, Floor Plate Latch Pin, Floor Plate Latch Spring, Floor Plate Pivot Pin, Trigger Guard) (not shown)	7.50
26655	Trigger Housing Assembly (includes Trigger Housing Spacer (3), Trigger Side Plate (2)	5.25
24477	Trigger Pin	.25
15400	Trigger Spring	.25
15481	Trigger Stop Screw	.25

DELIVERIES ARE F.O.B. ILION, N. Y.

PARTS AND PRICES SUBJECT TO CHANGE WITHOUT NOTICE

Send all guns for factory service and inquiries on service and parts to

REMINGTON ARMS COMPANY, INC.
Arms Service Division
Ilion, New York

All other inquiries are to be addressed to

REMINGTON ARMS COMPANY, INC.
Bridgeport, Connecticut

MODEL 700

SECTIONAL VIEW

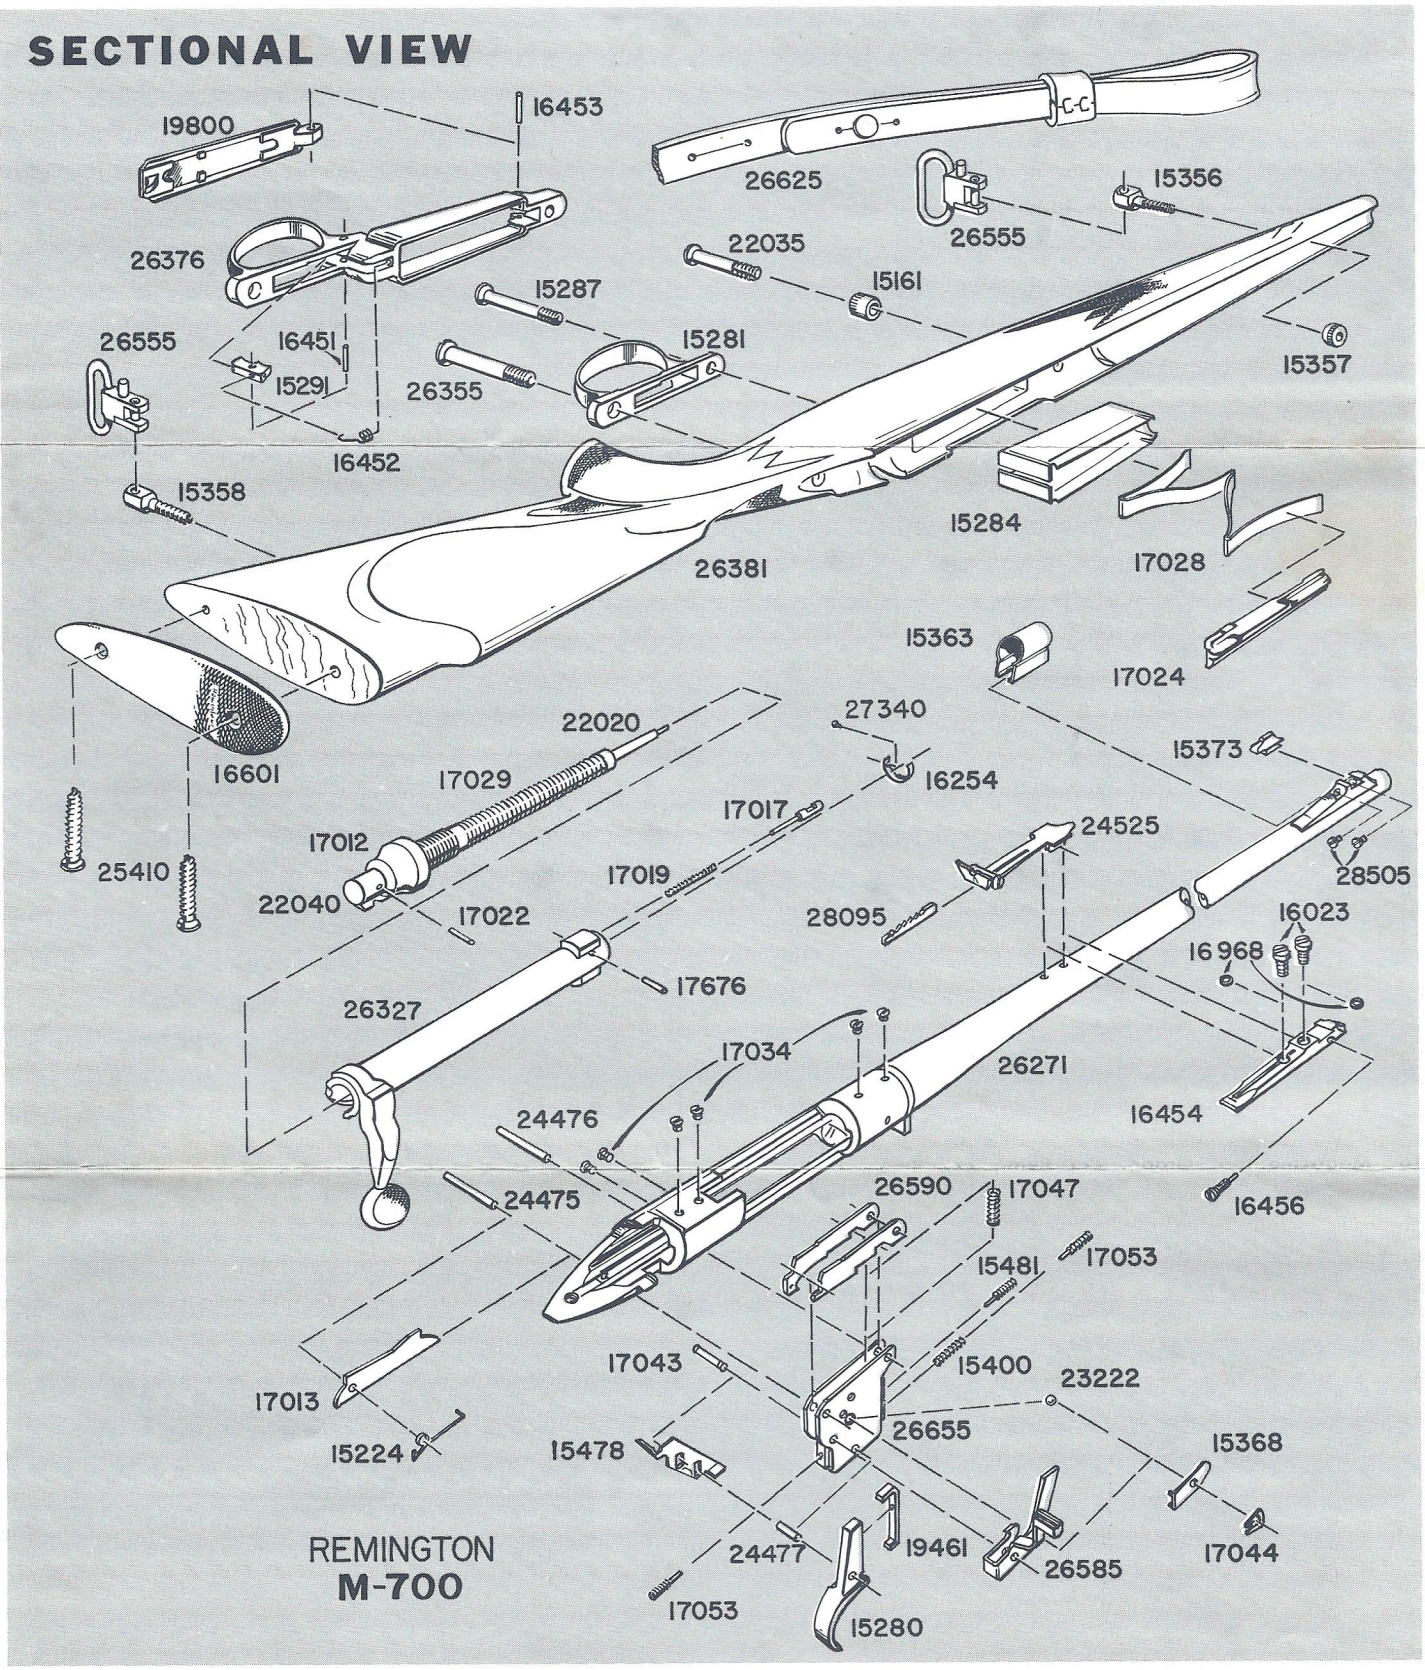

REPLACEMENT PARTS

When ordering parts specify model, caliber, part name and serial number of the gun.

NOTE: The sale of barrel assemblies and breech bolts is restricted. When these parts are needed for replacement, the arm must be returned to the factory as the use of special tools and gauges is required to assure proper operation. All other parts will be shipped as ordered but, since they are made to close dimensions, the particular part may require slight adjustment or fitting to assure proper functioning of the arm.

ADDITIONAL CALIBERS (Not Shown in Sectional View) Remington COMPONENT PARTS

BOLT ACTION — HIGH POWER RIFLE

6mm Rem., 7mm Rem. Mag., 264 & 300 Win. Mag., 222 Rem.
22-250 Rem., 222 Rem. Mag., 280 Rem., 243 & 308 Win., 270 Win.

MODEL 700

Note: Caliber part numbers not listed below same as 30-06

Part No.	NAME OF PART	List Price
26272	Barrel Assembly, 7mm Rem. Mag.	Price on Application
26274	Barrel Assembly, 6mm Rem.	
26273	Barrel Assembly, 264 Win. Mag.	
26265	Barrel Assembly, 222 Rem.	
26266	Barrel Assembly, 222 Rem. Mag	
26267	Barrel Assembly, 243 Win.	
27675	Barrel Assembly, 300 Win., Mag.	
26268	Barrel Assembly, 308 Win.	
26269	Barrel Assembly, 270 Win.	
26270	Barrel Assembly, 280 Rem.	
27678	Barrel Assembly, 22 - 250 Rem.	
26328	Bolt Assembly, 7mm Rem. Mag., 264 & 300 Win. Mag.	
26325	Bolt Assembly, 222 Rem., 222 Rem. Mag.	
26326	Bolt Assembly, 243 Win., 308 Win., 6mm Rem., 22 - 250 Rem.	
26318	Bolt Final Assembly, 7mm Rem. Mag., 264 & 300 Win. Mag. (includes same as 30-06)	
26315	Bolt Final Assembly, 222 Rem., 222 Rem. Mag.	
26420	Bolt Final Assembly, 222 Rem., 222 Rem. Mag.	
26316	Bolt Final Assembly, 243 Win., 308 Win., 6mm Rem., 22 - 250 Rem.	
15852	Ejector, 222 Rem., 222 Rem. Mag.	$ .90
15709	Extractor, 7mm Rem. Mag., 264-300 Win. Mag.	1.35
15850	Extractor, 222 Rem., 222 Rem. Mag.	1.35
27341	Extractor Rivet, 7mm Rem. Mag., 264 - 300 Win. Mag.	.25
27342	Extractor Rivet, 222 Rem., 222 Rem. Mag.	.25
22021	Firing Pin, 222 Rem., 222 Rem. Mag., 243-308 Win., 6mm Rem., 22 - 250 Rem.	3.00
22041	Firing Pin Assembly, 222 Rem., 222 Rem. Mag., 243 Win., 308 Win., 6mm Rem., 22 - 250 Rem.	7.50
16434	Floor Plate, BDL Grade, 222 Rem., 222 Rem. Mag., 243 & 308 Win., 6mm Rem., 22 - 250 Rem.	2.10
22037	Front Guard Screw, 222 Rem., 222 Rem. Mag., 243 & 308 Win., 6mm Rem., 22 - 250 Rem.	.25
15282	Magazine, ADL Grade, 222 Rem., 222 Rem. Mag.	.80
16716	Magazine, BDL Grade, 222 Rem., 222 Rem. Mag.	.90
15283	Magazine, ADL Grade, 243 & 308 Win., 6mm Rem., 22 - 250 Rem.	.80
16715	Magazine, BDL Grade, 243 & 308 Win., 6mm Rem., 22 - 250 Rem.	.80
17975	Magazine Follower, 222 Rem.	.60
16793	Magazine Follower, 222 Rem. Mag.	.80
17056	Magazine Follower, 243 Win., 308 Win., 6mm Rem., 22 - 250 Rem.	.60
15285	Magazine Spacer, 222 Rem.	.35
16826	Magazine Spacer, 222 Rem., BDL Grade	.35
15286	Magazine Spacer, 222 Rem. Mag., BDL Grade	.50
15742	Magazine Spacer, 222 Rem. Mag., ADL Grade	.35
17983	Magazine Spring, 222 Rem., 222 Rem. Mag.	.90
17891	Magazine Spring, 243 Win., 308 Win., 6mm Rem.	.80
15698	Magazine Spring, 22 - 250 Rem.	.80

Part No.	NAME OF PART	List Price
17058	Main Spring, 222 Rem., 222 Rem. Mag., 243 Win., 308 Win.	.50
21387	Recoil Pad, 7mm Rem. Mag., 264 & 300 Win. Mag.	3.75
16262	Recoil Pad Screw, 7mm Rem. Mag., 264 & 300 Win. Mag.	.25
26382	Stock Assembly, 7mm Rem. Mag., 264 Win. Mag., ADL Grade (includes Front Guard Screw Bushing, Recoil Pad, Recoil Pad Screw (2), Stock, Stock Reinforcing Screw, Stock Reinforcing Screw Dowel)	46.00
26415	Stock Assembly, 7mm Rem. Mag., 264-300 Win. Mag., BDL Grade (includes Fore-end, Fore-end Spacer, Grip Cap, Grip Cap Spacer, Recoil Pad, Recoil Pad Screw (2), Front Swivel Nut, Stock, Stock Reinforcing Screw, Stock Reinforcing Screw Dowel)	51.70
26380	Stock Assembly, 222 Rem., 222 Rem. Mag., 243 Win., 308 Win., 6mm Rem., 22 - 250 Rem., ADL Grade	38.50
26400	Stock Assembly, 222 Rem., 222 Rem. Mag., 243 Win., 308 Win., 6mm Rem., 22 - 250 Rem., BDL Grade	44.20
26375	Trigger Guard, BDL Grade, 222 Rem., 222 Rem. Mag., 243 & 308 Win., 6mm Rem., 22 - 250 Rem.	6.00
26370	Trigger Guard Assembly, BDL Grade, 222 Rem., 222 Rem. Mag., 243 Win., 308 Win., 6mm Rem., 22 - 250 Rem. (includes same as 30-06, BDL Grade)	7.50

CALIBERS: 375 H&H Magnum, 458 WIN. MAGNUM

27265	Barrel Assembly, 375 H&H Mag.	Price on Application
27266	Barrel Assembly, 458 Win. Mag.	
15709	Extractor	1.20
16771	Front Sight, 375 H&H Mag.	.60
23805	Front Sight, 458 Win. Mag.	.70
27270	Stock Assembly, 375 H&H Mag., 458 Win. Mag. (includes same as standard Magnum except Stock Bolt (2), Nut (2), Cover (4) used).	Price on Application

SUPERSEDED PARTS

16717	Front Sight Ramp, 6mm Rem., 7mm Rem. Mag., 264 Win. Mag., 222 Rem., 222 Rem. Mag., 243 Win., ADL Grade	.90
15361	Front Sight Ramp, 7mm Rem. Mag., 264 Win. Mag., 222 Rem., 222 Rem. Mag., 243 Win., BDL Grade	1.50
24477	Front Sight Ramp Pin, 6mm Rem., 7mm Rem. Mag., 264 Win. Mag., 222 Rem., 222 Rem. Mag., 243 Win.	.25
19025	Front Sight Ramp Screw, 7mm Rem. Mag., 6mm Rem., 264 Win. Mag., 222 Rem., 222 Rem. Mag., 243 Win.	.25

INSTRUCTIONS FOR ORDERING PARTS

(Please read carefully)

When ordering parts — please order by part number and part name. Give also model name and number of gun, serial number (if any), and state caliber or gauge. Please identfy from the component parts, picture or section view.

Cover only one subject in letter or order. Do not order spare parts and give instructions on repair of a gun or guns in the same letter **— this delays service.**

Please **do not ship sample parts** to Firearms Factory unless it is impossible to identify from the Parts List or Instruction Folder. See shipping instructions concerning FACTORY SERVICE.

Parts will be furnished for discontinued models as long as the supply is available. We are unable to supply parts for models or repair guns not listed in Complete Line Parts List.

The sale of the following parts and certain other parts is restricted because special tools and gauges are required during assembly to make sure the firearm will operate properly.

- Barrel
- Breech Block or Bolt
- Receiver

All parts will be shipped as ordered, but since they are made to close dimensions, the particular part may require slight adjustment or fitting to assure proper functioning of the arm.

IMPORTANT: Do not combine Part Orders with Gun Service Orders.

Please send Part Orders direct to:

REMINGTON ARMS COMPANY, INC.
PARTS DEPT.
ARMS SERVICE DIVISION
Ilion, New York

INSTRUCTIONS FOR FACTORY SERVICE

Please read carefully before making shipment to the Firearms Plant at ILION, NEW YORK

Please package carefully when shipping firearms to factory. Use plenty of cushioning material to prevent movement of gun or gun parts in package during transit.

Please do not ship gun in a gun case, or special container that must be returned from the factory. The return of your gun or parts will be greatly speeded if properly packaged in a throw-away carton.

All shipments should have forwarding and return address clearly marked on gun package as well as on attached letter.

To further improve service — please attach complete letter of information securely on outside of each package returned to the factory for repairs.

Please do not return gun accessories such as sling straps, quick release swivels, special boots, covers, telescopes, mounts or any special equipment to the factory with the gun shipment.

Give full details of the contents of the shipment — state whether complete gun or part. List model name and model number, serial number (if any), and caliber or gauge.

Give full condition of contents — stock and fore-end damage (if any), metal damage (if any), barrel bent or damaged (if any), parts missing, etc. A full description will enable us to more accurately list the needed repairs.

Cover only **one subject** in letter or order. **Do not** order spare parts and give instructions on repair of a gun or guns in the same letter **— this delays service.**

THEN — to avoid all possible delay in starting work on your gun or parts, please include in your first order or letter the trouble you wish corrected, any changes you desire, or parts you wish replaced.

If an estimate is required before the work is started, please advise. Otherwise we will proceed with the necessary work and send a statement of the cost to you. In this manner your gun or parts can be reshipped at the earliest possible date.

Unless you specify otherwise, shipments will be made by way of Parcel Post on small packages, Express on larger packages.

Remington gun parts are not interchangeable with those of any other make of gun. For this reason the Remington Arms Company, Inc. cannot service any gun not of our manufacture.

Repairs will be made on discontinued models as long as the supply of parts is available. However, **repairs cannot be made** for models which are **not listed** in complete line Parts List.

IMPORTANT: Before packaging guns for return to factory, ALL LIVE AMMUNITION SHOULD BE REMOVED.

If live ammunition is included in package, shipment cannot be made by Insured Mail. All other shipments may be made by Insured Mail, Express, Motor Transport, or Freight.

Please send repairs direct to:

REMINGTON ARMS COMPANY, INC.
ARMS SERVICE DIVISION
Ilion, New York

SIGHT ADJUSTMENT—Open Sights (Fig. 5). The sights on the Remington 700 are targeted at 100 yards and carefully adjusted at the factory.

WINDAGE — The rear sight eyepiece may be moved to the left by turning the windage screw clockwise. By turning the windage screw counter clockwise the rear sight eyepiece may be moved to the right. This will move bullet impact at target to right.

Note: The windage screw is located beneath the eyepiece.

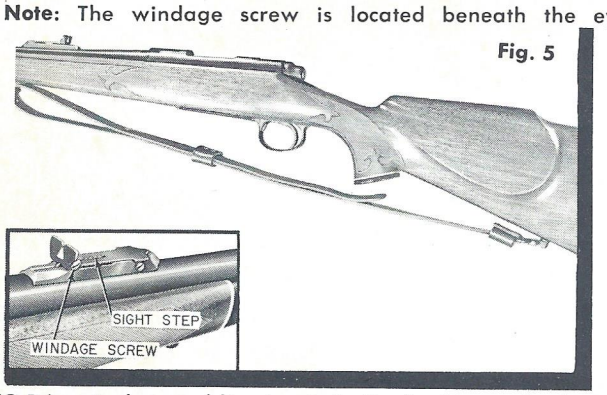

Fig. 5

ELEVATION OR RANGE — The rear sight may be raised or lowered by adjusting the notched sight step beneath the rear eyepiece. The elevation of the rear sight will increase range or raise bullet impact at target.

TELESCOPE OR RECEIVER SIGHTS — The all-purpose stock on the Remington 700 is adapted for use with telescope or receiver sights as well as gun factory sights. The receiver is drilled and tapped also for telescope and receiver sights. The location and design of the rear sight holes are standard for most target telescope mounts. If rear sight is removed for receiver sighting clearance, the rear sight barrel screw holes may be filled with the receiver plug screws. Front sight ramp may also be removed and receiver plug screws used at muzzle.

SLING STRAP (Fig. 5) — A sling strap complete with mountings is packaged with each BDL Grade rifle. When attaching to rifle — assemble both quick detachable (Q.D.) swivel assemblies to stock. To do this, push plunger on swivel until small plate lifts and can be swung free of attaching stud on swivel. Then insert attaching stud into eye of stock screw. Close plate on swivel to lock swivel to stock screw.

To attach strap to swivels — insert tongue of strap in rear swivel. Then loop strap back and thru attached rear keeper band. Pull strap to move rear keeper back in tight loop against rear swivel.

Slide front keeper band on free end of strap. Then insert strap thru front swivel and double strap back and thru attached front keeper. Insert brass fastener thru matching slots to join strap in desired position.

To remove strap from rifle, simply snap quick detachable swivels from stock screws and remove strap.

BALLISTICS — CENTER FIRE CARTRIDGES

Remington Calibers only listed below

M/700 also furnished in 30-06 Spfd., 243 Win., 308 Win., 270 Win., 264 Win. Mag., 300 Win. Mag. Calibers

	BULLET		VELOCITY — FEET PER SECOND						ENERGY — FOOT POUNDS						*TRAJECTORY					
CARTRIDGE	WGT. GRS.	STYLE	MUZZLE	100 YDS.	200 YDS.	300 YDS.	400 YDS.	500 YDS.	MUZZLE	100 YDS.	200 YDS.	300 YDS.	400 YDS.	500 YDS.	50 YDS.	100 YDS.	200 YDS.	300 YDS.	400 YDS.	500 YDS.
222 Rem. Hi-Spd.	50	S.P.	3200	2660	2170	1750	——	——	1140	785	520	340	——	——	0.0		—4.0	—15.7		
222 Rem. Hi-Spd.	50	M.C.	3200	2660	2170	1750	——	——	1140	785	520	340	——	——	0.0		—4.0	—15.7		
222 Rem. Mag. Hi-Spd.	55	S.P.	3300	2800	2340	1930	——	——	1330	955	670	455	——	——	0.0		—3.6	—13.8		
6MM. Rem. Hi-Spd.	100	Ptd. S.P.C.L.	3190	2920	2660	2420	2190	1980	2260	1890	1570	1300	1060	870		+1.6		— 6.5	—18.9	—38.7
280 Rem. Hi-Spd.	100	Br. P.	3570	3160	2770	2420	2090	1800	2830	2220	1700	1300	970	720		+1.3		— 5.8	—17.6	—37.5
280 Rem. Hi-Spd.	125	Ptd. S.P.C.L.	3190	2880	2590	2320	2070	1840	2820	2300	1860	1490	1190	940		+1.6		— 6.7	—19.8	—41.5
280 Rem. Hi-Spd.	150	Ptd. S.P.C.L.	2900	2670	2450	2220	2000	1790	2800	2370	2000	1640	1330	1070		+2.0		— 8.1	—23.0	—47.0
280 Rem. Hi-Spd.	165	S.P.C.L.	2820	2510	2220	1970	1740	1530	2910	2310	1810	1420	1110	860		+2.3		— 9.3	—27.6	—57.5
7MM. Rem. Mag.	150	Ptd. S.P.C.L.	3260	2970	2700	2450	2210	1990	3540	2945	2435	1990	1620	1310		+1.5		— 6.3	—18.4	—37.7
7MM. Rem. Mag.	175	S.P.C.L.	3070	2720	2400	2120	1870	1640	3660	2870	2240	1750	1360	1040		+2.0		— 7.8	—23.1	—49.1
22-250 Rem.**	55	Ptd. S.P.	3760	3230	2745	2305	1920	1585	1730	1275	920	650	450	305			—2.4	— 9.5	—23.1	—46.6

*Inches Above (+) or Below (—) Line of Sight. Rifle Sighted in at 200 Yards. Hold Low for (+) Figures, High for (—) Figures.

**Ballistics for the 22 - 250 Rem. based on actual firing in a Model 700 rifle with a 24 inch barrel.